

1880397 K-Locker Blue Wardrobe Cabinet 1880407 K-Locker Red Wardrobe Cabinet

Parts and Hardware List


A.	Top Panel	1 pc
B.	Front Assembly	1 pc
C.	Back Assembly	1 pc
D.	Left & Right Side Panels	2 pcs
E.	Bottom Panel	1 pc
F.	Adjustable Shelves	3 pcs
G.	Stretcher	1 pc
H.	Front Casters (with brake)	2 pcs
I.	Back Casters (without brake)	2 pcs
J.	Long Flat Allen Head Bolts	4 pcs
K.	Middle Flat Allen Head Bolts	4 pcs
L.	Short Flat Allen Head Bolts	8 pcs
M.	Pan Allen Head Bolts	28 pcs
N.	Shelf Supports	12 pcs
O.	Phillips Head Screws	2 pcs
P.	Plastic Anchors	2 pcs
Q.	Allen Head Wrench	1 pc
R.	Phillips Head Screwdriver	1 pc
S.	Spanner	1 pc
T.	Optional Allen Head Screwdriver Bit	1 pc


- Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.
- * This item is to be assembled by an adult and is not intended to be taken apart by a child.

Page 1 of 5




1880397 K-Locker Blue Wardrobe Cabinet 1880407 K-Locker Red Wardrobe Cabinet <u>Hardware Illustrations</u>

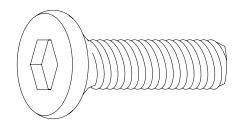


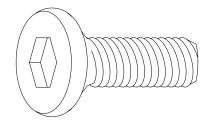


J. Long Flat Allen Head Bolt




K. Middle Flat Allen Head Bolt




L. Short Flat Allen Head Bolt



M. Pan Allen Head Bolt



N. Shelf Support



O. Phillips Head Screw

P. Plastic Anchor

Page 2 of 5 R1-10-20-04




1880397 K-Locker Blue Wardrobe Cabinet 1880407 K-Locker Red Wardrobe Cabinet

Attach Front & Back Assemblies, Left & Right Side Panels, Bottom Panel and Casters

Parts required

B.	Front Assembly	1 pc	J.	Long Flat Allen Head Bolts	4 pcs
C.	Back Assembly	1 pc	L.	Short Flat Allen Head Bolts	8 pcs
D.	Left & Right Side Panels	2 pcs	M.	Pan Allen Head Bolts	28 pcs
E.	Bottom Panel	1 pc	Q.	Allen Head Wrench	1 pc
H.	Front Casters (with brake)	2 pcs	S.	Spanner	1 pc
I.	Back Casters (without brake)	2 pcs	T.	Optional Allen Head Screwdriver Bit	1 pc

- 1. Attach Front and Back Assemblies (B&C) Place the Back Assembly (C) down on a soft surface. Insert the top & bottom stocks of Front and Back Assemblies (B&C) into the top & bottom tubes of Left & Right Side Panels (D). See illustration #1. Make sure all pre-threaded holes in the stocks of Front & Back Assemblies (B, C) align with the pre-drilled holes in the tubes of Left & Right Side Panels (D). Secure with Short Flat Allen Head Bolts (L) using Allen Head Tool (Q or T). Secure Side Panels (D) to Front and Back Assemblies (B&C) with Pan Allen Head Bolts (M) using Allen Head Tool (Q or T). See illustration #2.
- 2. <u>Attach Bottom Panel (E)</u> Align the pre-drilled holes in the Bottom Panel (E) with the pre-drilled holes in the bottom tubes of Front & Back Assemblies (B, C). Secure with Long Flat Allen Head Bolts (J) using Allen Head Tool (Q or T). See illustration #2.
- 3. Attach Front & Back Casters (H, I) Align the exposed threads of Front & Back Casters (H, I) with the pre-threaded holes in Front & Back Assemblies (B, C). Tighten by hand by turning in a clockwise direction, then fully tighten using Spanner (S). See illustration #2.

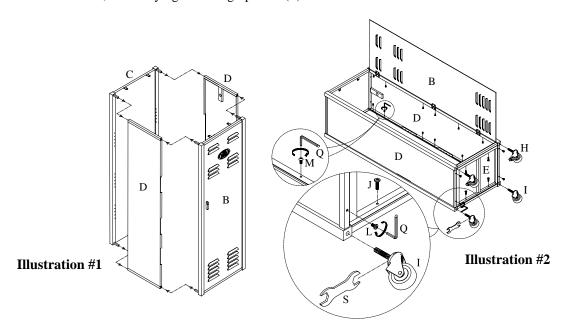

Page 3 of 5




1880397 K-Locker Blue Wardrobe Cabinet 1880407 K-Locker Red Wardrobe Cabinet

Attach Top Panel, Stretcher and Adjustable Shelves

Parts required

A.	Top Panel	1 pc	G.	Stretcher	1 pc
B.	Front Assembly	1 pc	K.	Middle Flat Allen Head Bolts	4 pcs
C.	Back Assembly	1 pc	N.	Shelf Supports	12 pcs
D.	Left & Right Side Panels	2 pcs	Q.	Allen Head Wrench	1 pc
E.	Bottom Panel	1 pc	T.	Optional Allen Head Screwdriver Bit	1 pc
F.	Adjustable Shelves	3 pcs			_

- 4. <u>Attach Top Panel (A)</u> Align the pre-threaded holes in the Top Panel (A) with the pre-drilled holes in the brackets of Front & Back Assemblies (B, C). Secure with Middle Flat Allen Head Bolts (K) using Allen Head Tool (Q or T). See illustration #3.
- 5. <u>Attach Stretcher (G)</u> Slant and insert the Stretcher (G) with its grooves downwards into the holes in the Front & Back Panels (D). See illustration #3.
- 6. <u>Attach Adjustable Shelves (F)</u> Align the exposed threads of Shelf Supports (N) with the desired prethreaded holes in the posts of Front & Back Assemblies (B, C). Slant and place the Adjustable Shelves (F) on the Shelf Supports (N). See illustration #3.

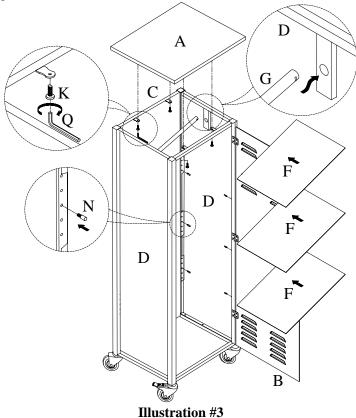

Page 4 of 5



1880397 K-Locker Blue Wardrobe Cabinet 1880407 K-Locker Red Wardrobe Cabinet Attach Cabinet to Wall

Parts required

C.	Back Assembly	1 pc	P.	Plastic Anchors	2 pcs
O.	Phillips Head Screws	2 pcs	R.	Phillips Head Screwdriver	1 pc

4. Attach Cabinet to Wall Place the cabinet in the desired location against the wall. Mark the location through the pre-drilled holes in the Back Assembly (C). Drill the holes in the wall and insert Plastic Anchors (P) in holes. Tap gently with hammer to insert anchors firmly. Insert the Phillips Head Screws (M) through the holes in the Back Assembly (C) into the Plastic Anchors (P). Secure with Phillips Head Screwdriver (R). See illustration #4.

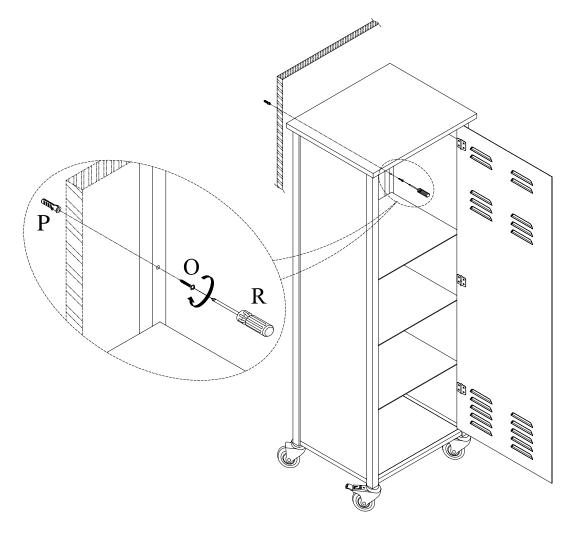


Illustration #4

Page 5 of 5